INSTRUCTION MANUAL











#### **DISCLAIMER**

All information on this document is subject to change at the sole discretion of Kraken RC, Inc. for up-to-date product information, please visit krakenrc.com for the latest updates.

#### **ATTENTION**

Please read this manual in its entirety and observe applicable suggestions and recommendations. Failure to operate the product correctly may result in damage to the product, personal property and cause serious injury.

#### WARNING

VESLA.5 is recommended only for professional or advanced RC drivers.

Failure to follow all instructions can lead to damage to your vehicle, property damage and bodily injury or death.

#### CAUTION

Making modifications to your car not specified in this manual may void the warranty and cause your vehicle to malfunction.

VESLA.5 is a remote control vehicle operated by radio frequencies. Please be aware of radio interference in your area or you may lose reception. Always be aware of your surroundings while driving VESLA.5. We highly recommend using a Kill Switch which can be purchased from Davesmotors.com. A Kill Switch will allow you to "kill" your engine remotely should you lose control of the vehicle.

- Never run your vehicle on the street where people are present
- Invest in a Kill Switch
- VEKTA.5 battery box is not waterproof, avoid running in water
- Never run your vehicle with low transmitter batteries
- Invest in a high quality radio transmitter and batteries
- Always turn off engine first, then receiver, then transmitter
- Inspect your vehicle after each run and perform maintenance on the vehicle when necessary





#### **KRAKEN RC LIMITED WARRANTY (USA)**

VESLA.5 is warranted to be free of defects in material and workmanship. This warranty does not cover damage due to normal wear and tear, user error of assembly, installation, user modifications and after-market hop ups used. This warranty is not transferable. Kraken RC will, at our discretion, repair or replace products or parts, provided our inspection indicates that an original defect exists. Kraken RC reserves the right to replace any product or part which is no longer available with a product of comparable value and function. If Kraken RC determines that the repairs or replacements are not covered under warranty guidelines, there could be a charge applied for repair and return shipping charges.

#### **KRAKEN RC LIMITED WARRANTY (USA)**

Please return product to your local dealer where the purchase was made. Kraken RC assumes no responsibility for Kraken RC products sold internationally by online retailers.

#### THANK YOU!

Kraken RC would like to thank you for purchasing the VESLA.5. Only through hard work, great investments, and time were we able to bring this vehicle into reality. The VESLA.5 is the product of our passion and joy for our RC hobby and we are so grateful to be able to share our dream with you. We wish you many hours of fun and hope that the VESLA.5 brings you miles of smiles.


Happy Bashing!

Team Kraken

# **TABLE OF CONTENTS**

| Introduction                           |   |  |  |  | . <u>5</u> |
|--|---|--|--|--|------------|
| ESC Programming and radio adjustments. | × |  |  |  | . <u>6</u> |
| Slipper Gear Maintenance               | × |  |  |  | . <u>8</u> |
| Shocks Maintenance                     | × |  |  |  | <u>11</u>  |
| Differential Maintenance               |   |  |  |  | <u>17</u>  |
| Roll Cage Assembly instructions        |   |  |  |  | 21         |


#### INTRODUCTION

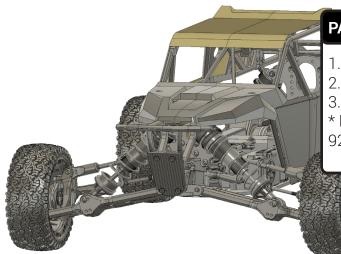

#### PARTS NEEDED TO COMPLETE:


- 1. 3AAA Batteries
- 2. 4S LIPO Batteries (8S) Set of two\*
- 3. Battery Charger
- \* Battery tray dimesions 160mm (L) x 92mm (W).

#### REMOVE THE ROLL CAGE AND INTALL YOUR LIPO BATTERIES

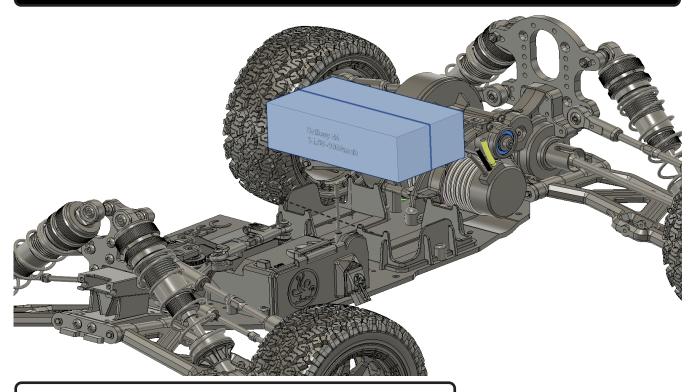


- Before you start, please ensure that your vehicle is lifted and the wheels are off the ground. For extra safety, program your ESC outside.
- 2. Locate the serial cable and attach it to the ESC's plugs (Red to Red and Black to black).
- 3. Install your LIPO Batteries with the leads on the opposite end. Ensure that any cables are not pinched.
- 4. Secure the batteries with the battery straps before operating.

Watch our step-by-step instructional video here - https://www.youtube.com/watch?v=6z7VS5UZCYM

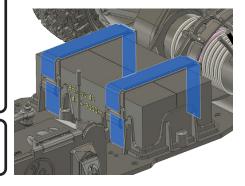

#### ADJUSTING STEERING AND THROTTLE TRIMS

- 1. Center the tires by adjusting the steering trim. Use subtrim if necessary (see your transmitter's instruction manual for further direction).
- If steering is not in the desired neutral position after binding, and steering cannot be centered using trim and subtrim, please follow these tips:
- (1). Reset trim and subtrim to set to its neutral factory settings.
- (2). Remove the servo horn and reinstall.
- (3). Retrim as needed.

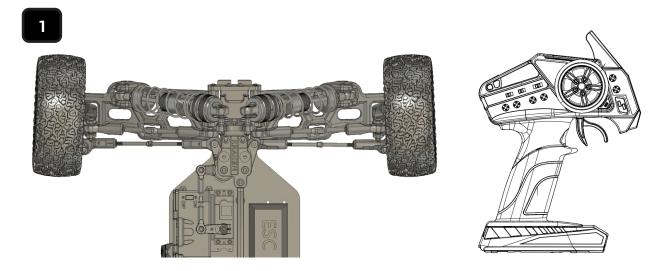


2. Make sure your receiver and servo are turned on and check that they are in neutral position. Use the diagram above as a guide for the position of the throttle/brake horn.



#### **ESC PROGRAMMING**


1

ESC Manual -https://tinyurl.com/2wu2tpce

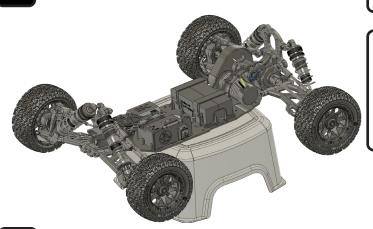

Before programming, please make sure that the vehicle is off the ground and the wheels are free spinning. You can prop up the vehicle on a stool as pictured.


2

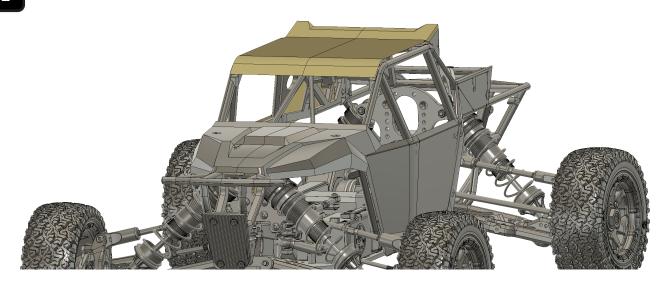


2. Attach the roll cage

3


3. When you feel that your vehicle is ready, you can now go for a test drive. Operate the vehicle in an open space away from traffice and people. Drive slow at first to make sure everything is working correctly

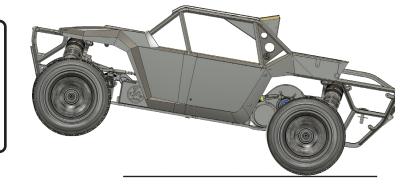


### **SLIPPER GEAR MAINTENANCE**

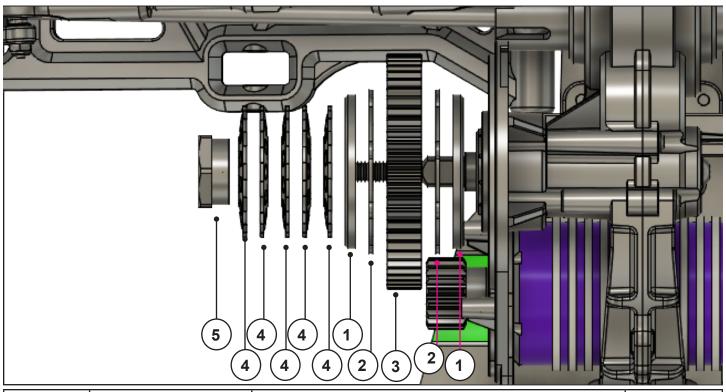


| Assembly | Item Number | Name                      | Quantity |
|----------|-------------|---------------------------|----------|
| 1        | KVS425      | SlipperDisk               | 2        |
| 2        | KV4414      | KV5-SlipperPad            | 2        |
| 3        | KVS423      | SlipperGear,m1.5 T57      | 1        |
| 4        | KV3306      | KV5-DiskSpring50x25.4x1.5 | 5        |
| 5        | KVS463      | SlipperAdjustingNut       | 1        |

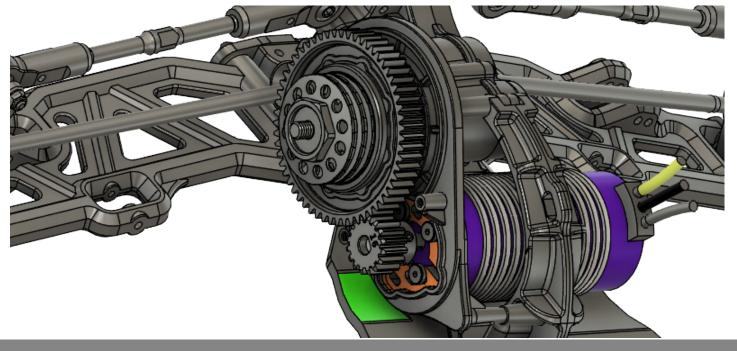


### **SLIPPER GEAR MAINTENANCE**

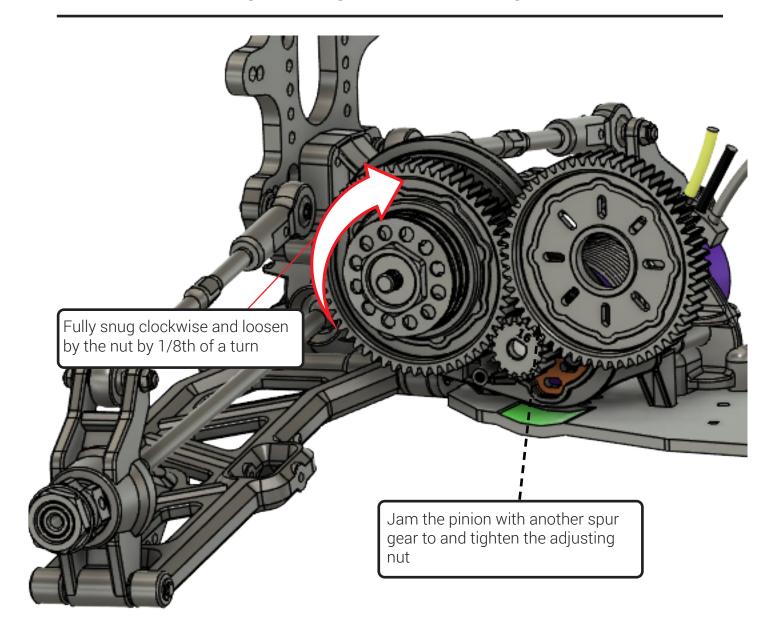


### **SLIPPER GEAR MAINTENANCE**

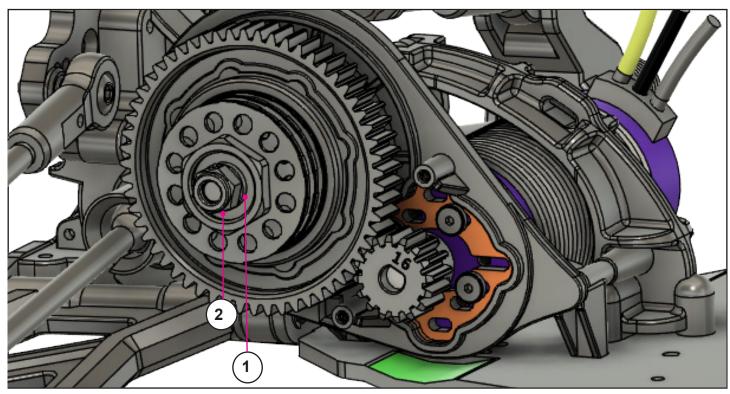


| Assembly | Item Number | Name              | Quantity |
|----------|-------------|-------------------|----------|
| 1        | 3300089     | WasherS8x15.6x2.5 | 1        |
| 2        | KKR412012   | LockNut080        | 1        |

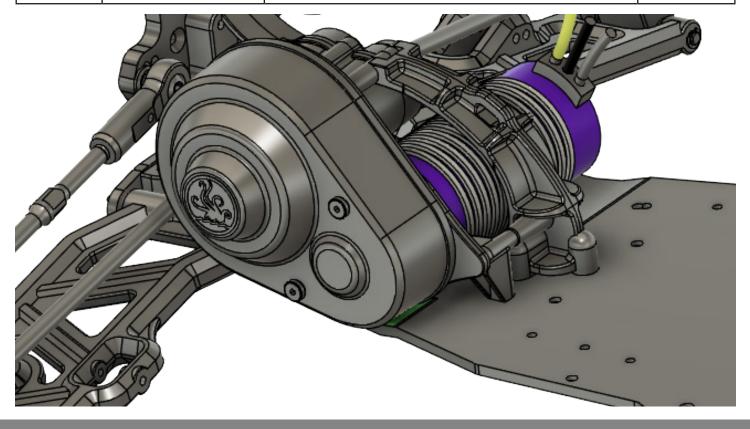

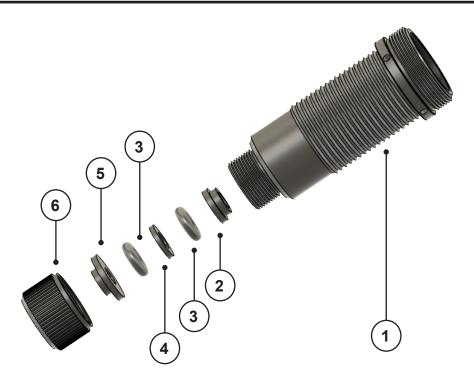


| Assembly | Item Number | Name                 | Quantity |
|----------|-------------|----------------------|----------|
| 1        | KVS444      | ShockBody            | 1        |
| 2        | KV8853      | KV5-ShockShaftGuide  | 1        |
| 3        | KV3303      | ORing8x4(NBR70)      | 2        |
| 4        | KV8852      | KV5-Shock-BackUpRing | 1        |
| 5        | KV8856      | KV5-ShockShaftGuideA | 1        |
| 6        | KV5559      | KV5-ShockSealCap     | 1        |



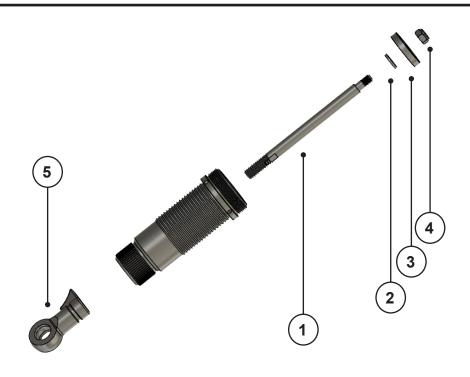


| Assembly | Item Number | Name              | Quantity |
|----------|-------------|-------------------|----------|
| 1        | KVS445      | ShockShaft        | 1        |
| 2        | KV3381      | Washer6x12x1.6    | 1        |
| 3        | KV8851      | KV5-ShockPiston   | 1        |
| 4        | KV3334      | LockNut6          | 1        |
| 5        | KV8854      | KV5-ShockShaftEnd | 1        |



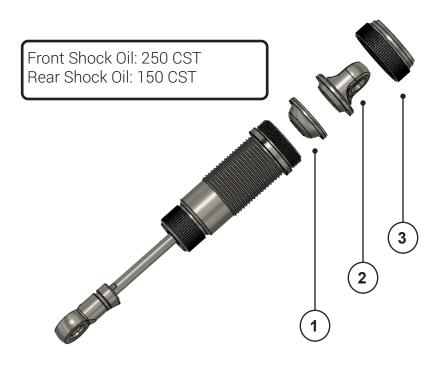



| Assembly | Item Number | Name               | Quantity |
|----------|-------------|--------------------|----------|
| 1        | KV4433      | KV5-ShockDiaphragm | 1        |
| 2        | KV8855      | KV5-ShockTopEnd    | 1        |
| 3        | KV5548      | KV5-ShockTopCap    | 1        |



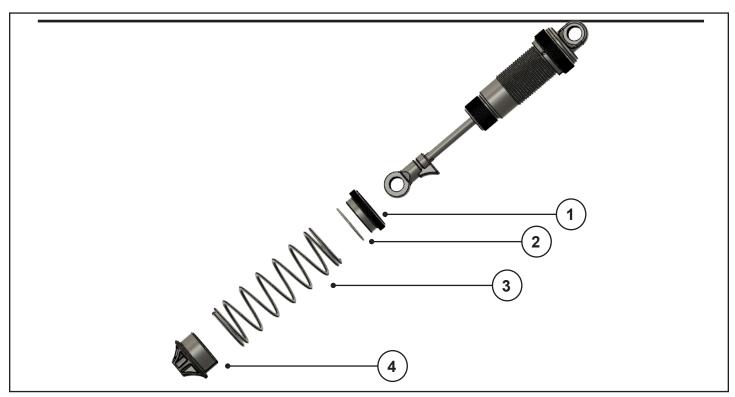


| Assembly | Item Number | Name                         | Quantity |
|----------|-------------|------------------------------|----------|
| 1        | KV5560      | KV5-ShockSpringAdjustingRing | 1        |
| 2        | KV3302      | ORing33.5x2,S34(NBR70)       | 1        |
| 3        | KV5561      | KV5-FrontShockSpring         | 1        |
| 4        | KV8850      | KV5-ShockSpringPerch         | 1        |

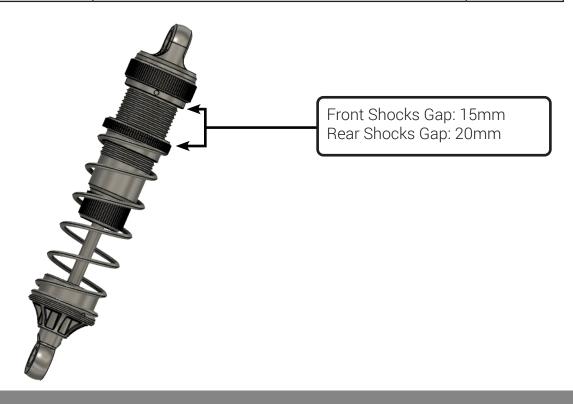

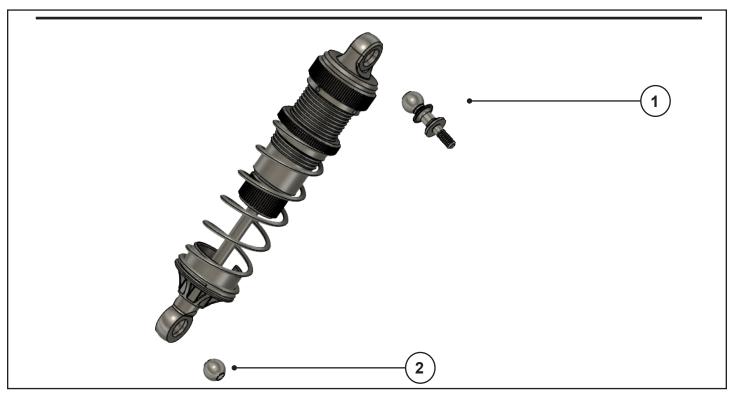


| Assembly | Item Number | Name           | Quantity |
|----------|-------------|----------------|----------|
| 1        | KV5509      | KV5-ShockStand | 1        |
| 2        | KV5508      | KV5-Ball13.8x5 | 1        |



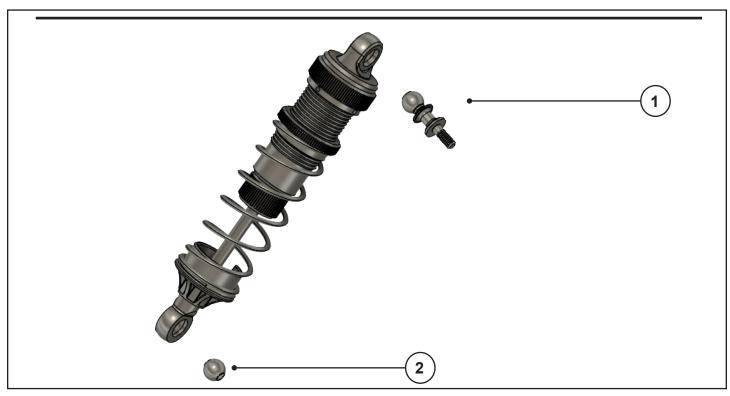



| Assembly | Item Number | Name           | Quantity |
|----------|-------------|----------------|----------|
| 1        | KV5509      | KV5-ShockStand | 1        |
| 2        | KV5508      | KV5-Ball13.8x5 | 1        |



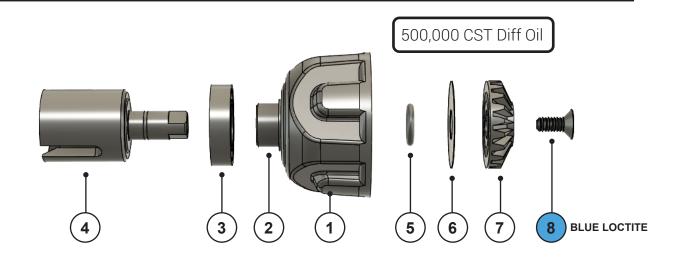


| Assembly | Item Number | Name   | Quantity |
|----------|-------------|--|----------|
| 1        | KV4436      | KV5-DiffCase                                 | 1        |
| 2        | KV4437      | KV5-DiffCaseBushing (Pressed inside 2702288) | 1        |
| 3        | KV3317      | Bearing15x28x7                               | 1        |
| 4        | KV5547      | KV5-DiffOutDriver                            | 1        |
| 5        | KV3304      | ORing9.8x2.4,P10A(NBR70)                     | 1        |
| 6        | KV4428      | KV5-DiffWasher10x30x03                       | 1        |
| 7        | KV4425      | DiffBevelSunGear                             | 1        |
| 8        | KV3365      | ScrewFH5x12                                  | 1        |

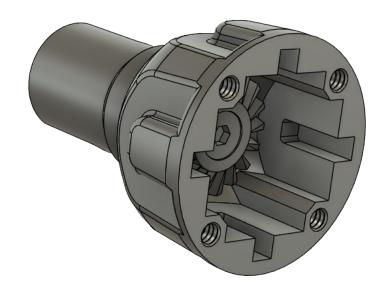


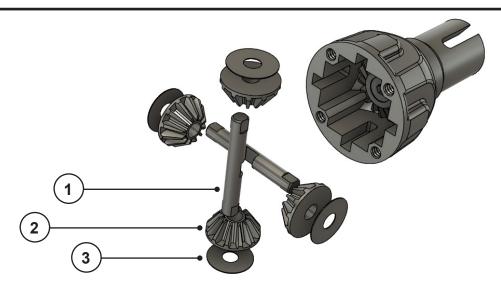

| Assembly | Item Number | Name                  | Quantity |
|----------|-------------|-----------------------|----------|
| 1        | KV5546      | KV5-DiffCrossPin      | 2        |
| 2        | KV4426      | DiffBevelPlanetGear   | 4        |
| 3        | KV4429      | KV5-DiffWasher6x18x03 | 4        |

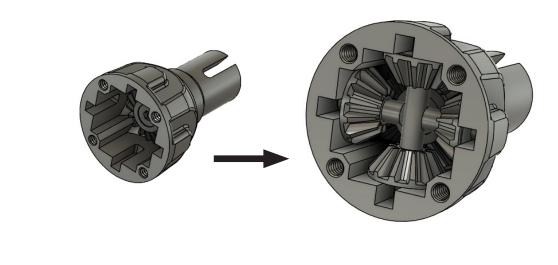




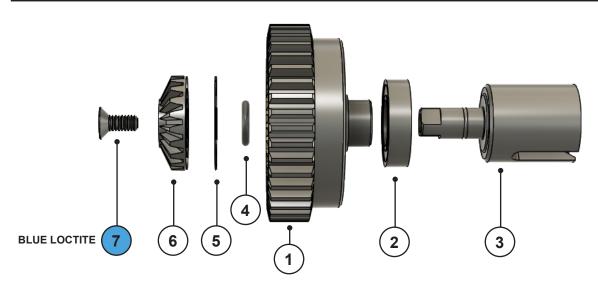

| Assembly | Item Number | Name                     | Quantity |
|----------|-------------|--------------------------|----------|
| 1        | KVS472      | DiffRingGear             | 1        |
| 2        | KV3317      | Bearing15x28x7           | 1        |
| 3        | KV5547      | KV5-DiffOutDriver        | 1        |
| 4        | KV3304      | ORing9.8x2.4,P10A(NBR70) | 1        |
| 5        | KV4428      | KV5-DiffWasher10x30x03   | 1        |
| 6        | KV4425      | DiffBevelSunGear         | 1        |
| 7        | KV3365      | ScrewFH5x12              | 1        |




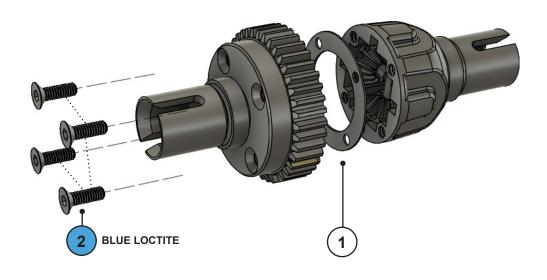


| Assembly | Item Number | Name           | Quantity |
|----------|-------------|----------------|----------|
| 1        | KV4427      | KV5-DiffGasket | 1        |
| 2        | KV3366      | ScrewFH5x16    | 4        |




### **ROLL CAGE ASSEMBLY**

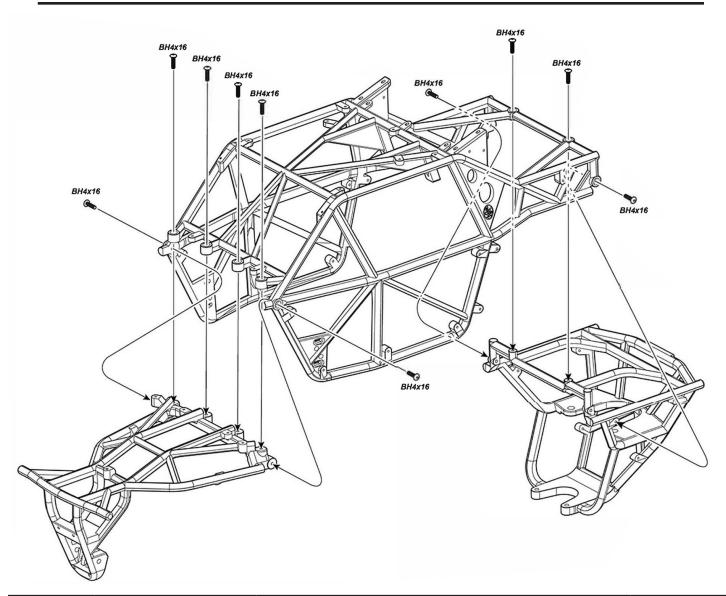


| Assembly | Item Number | Name        | Quantity |
|----------|-------------|-------------|----------|
| 1        | KV3340      | ScrewBH4x16 | 10       |

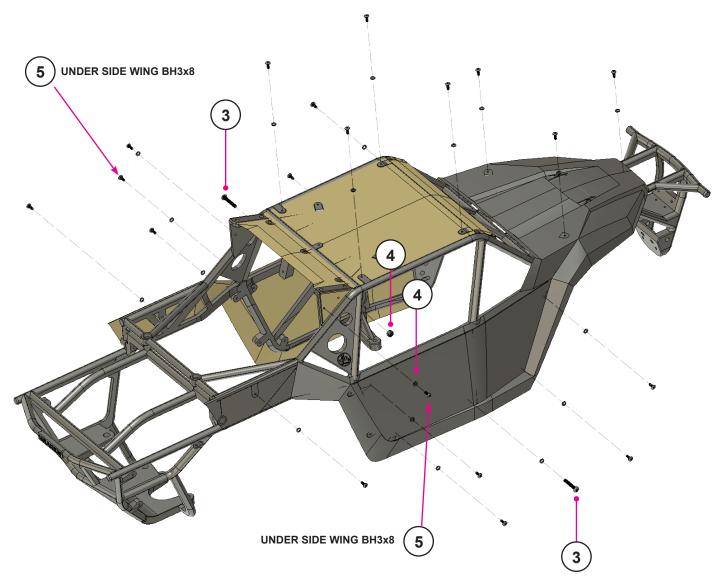


| Assembly | Item Number | Name   | Quantity |
|----------|-------------|--|----------|
| 1        | KV3343      | BH3x10 (All small screws otherwise indicated)            | 17       |
| 2        | KVS461      | 3x6x0.8mm Washer (All small washers otherwise indicated) | 19       |
| 3        | KV3360      | BH4x25   | 2        |
| 4        | KV3332      | M4locknut  | 2        |
| 5        | KV3338      | BH3x8  | 2        |

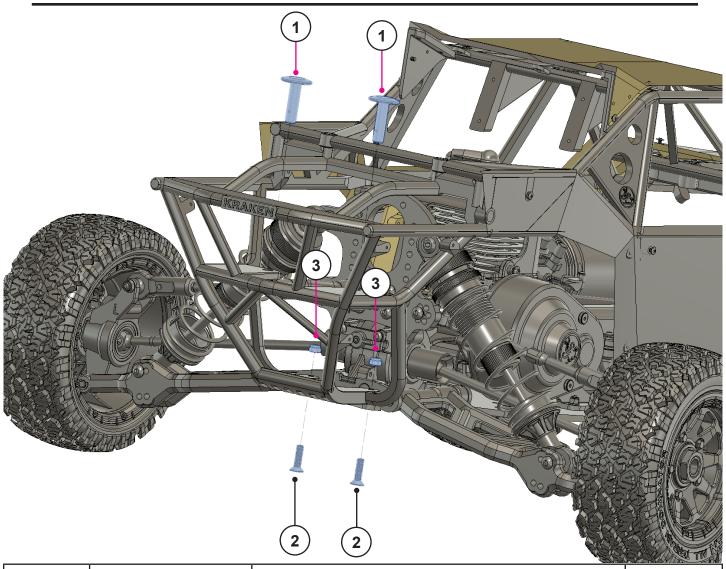


| Assembly | Item Number | Name       | Quantity |
|----------|-------------|------------|----------|
| 1        | KV3643      | Vesla Pins | 2        |
| 2        | KV3367      | FH5x20     | 2        |
| 3        | KV3333      | M5locknut  | 2        |
| 4        | KVS456      | Pin        | 2        |

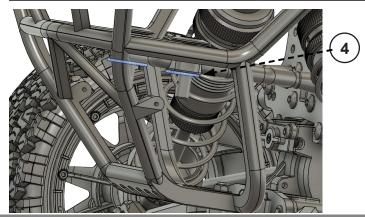

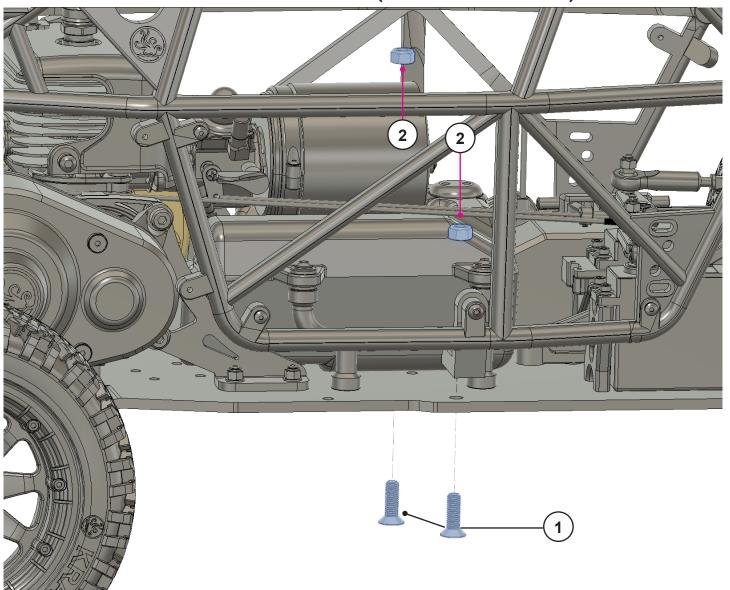

| Assembly | Item Number | Name      | Quantity |
|----------|-------------|-----------|----------|
| 1        | KVS415      | FH6x20    | 2        |
| 2        | KV3334      | M6Locknut | 2        |

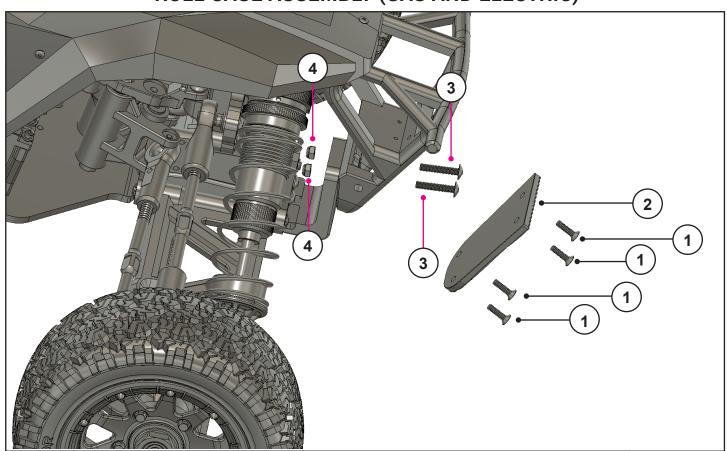

| Assembly | Item Number | Name                   | Quantity |
|----------|-------------|------------------------|----------|
| 1        | KVS454      | FH4x15                 | 4        |
| 2        | KV3641      | VESLA.5 Rollcage Brace | 1        |
| 3        | KV3456      | BH5x30                 | 2        |
| 4        | KV3333      | M5lockNut              | 2        |





KRAKEN RC, INC. CALIFORNIA, USA. WWW.KRAKENRC.COM